



**OJOS DE BUEY FRENTE DE PANEL**

The diagram illustrates the wiring for various Bullseye Switch (Ojos de Buey) models. Each switch is represented by a circle with a central letter (A, V, R) and four terminals (1, 2, 3, 4). The connections are as follows:

- XS-3011:** Terminal 1 to 816, Terminal 2 to 16, Terminal 3 to 815, Terminal 4 to 16.
- XS-3009:** Terminal 1 to 814, Terminal 2 to 14, Terminal 3 to 813, Terminal 4 to 14.
- XS-3010:** Terminal 1 to 812, Terminal 2 to 15, Terminal 3 to 811, Terminal 4 to 15.
- PB-3003:** Terminal 1 to 810, Terminal 2 to 8, Terminal 3 to 809, Terminal 4 to 8.
- HS-1101:** Terminal 1 to 841, Terminal 2 to 30, Terminal 3 to 840, Terminal 4 to 30.
- HS-1102:** Terminal 1 to 842, Terminal 2 to 31, Terminal 3 to 843, Terminal 4 to 31.

**BOTONERAS FRENTE DE PANEL**

The diagram illustrates the wiring for the Panel Front Push Button (Botoneras Frente de Panel) model XS-3014. The switch is represented by a circle with a central letter (R) and four terminals (A, B, 20, 21). The connections are as follows:

- XS-3014:** Terminal A to -SWR, Terminal B to 808, Terminal 20 to 1, Terminal 21 to 807.